

PACKING LIST

- 1 - Smart Switch
- 1 - Power Supply
- 1 - Connection Cable

INTRODUCTION

The Smart Switch allows you to control your dust collector and pneumatic valve with the flip of a switch. When you flip the On/Off switch, the dust collector will start automatically and open the pneumatic valve, opening the station.

INSTRUCTIONS

Plug the Smart Switch's power supply into an outlet. Plug the connector cable into the jack on the Smart Switch and plug the other end into a Combining Box/Hub. Plug the Combining Box/Hub into the remote port on the dust collector. Connect 1/4" OD air tube from an air supply to the quick disconnect on the Smart Switch. Connect a 1/4" tube from the pneumatic valve (PN: 10518) to the quick disconnect located on the side of the Smart Switch. Flip the On/Off switch to the ON position. The dust collector should come on and the pneumatic valve should open. Turn the switch to the OFF position, the dust collector should turn off and the pneumatic valve should close. The recommended supplied air pressure is 15 psi.

NOTE: To prevent damage, do not supply more than 20 psi to the Smart Switch or Pneumatic Valves.

Signal Cable Connection to:
Combining Box (PN: 96069)

OR

Standard Remote Hub (PN: 96109)

OR

SmartSpeed Remote Hub (PN: 96111)

Air Out to Pneumatic Valve
Recommended Air Pressure: **15 psi**
Maximum Air Pressure: **20 psi**

Power Supply

From Air Supply

On/Off Switch



Connection Guide for Smart Switch PN: 96068, Smart Mill Remote PN: 96082, Autopilot PN: 96073 and Smart Remote Switch PN: 96068B

