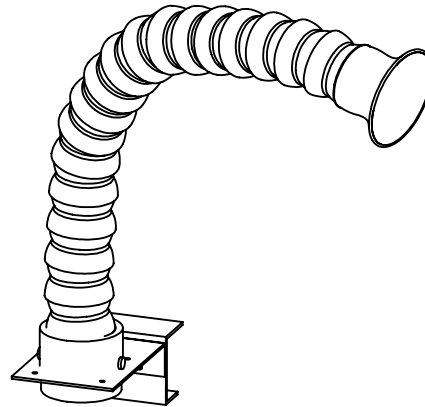

PACKING LIST

- 3 - 1ft Long Flex Hose Pieces
- 1 - Mounting Bracket
- 1 - Adapter 2-1/2" PVC to 2-1/2" Hose
- 4 - Mounting screws



INTRODUCTION

The Vaniman Flex Hose Kit is an easy way to provide a convenient and effective dust collecting station to the top or the front of your work surface. Using the mounting bracket attachment is made simple and easy. The Flex Hose Kit can be clamped onto the front of most work benches, if no hole is available. It can be positioned in many ways to collect dust, chips, mist, fumes and be pushed out of the way when not in use. Each link is snapped together and can be removed or added for precision. Multiple nozzles are available as well as a slide gate valve.

ACCESSORIES

Vaniman offers multiple Flex Hose Nozzles as well as a Flex Valve:

Additional Hose -

- 3' section (Grey) PN: 96001
- 1' section (Grey) PN: 96002
- 3' section (Black) PN: 96107
- 1' section (Black) PN: 96106

Nozzles -

- Round Nozzle PN: 96003
- Rectangular Nozzle PN: 96004
- Tapered Oval PN: 96005

Adapters -

- 3" PVC Drain Pipe (thin wall) PN: 96006
- 3" Sheet Metal Duct PN: 96007

Valves -

- Flex Valve PN: 96062

ASSEMBLY INSTRUCTIONS

1. Unpack the contents of the box and check the parts against the parts list and illustration above.
2. First, connect the three pieces of hose length to each other by firmly pressing one end of a length of hose onto another (Fig 1). The hose will only connect one way, so if it looks as though it will not fit flip the hose around. Connect the nozzle to the end of the hose in the same manner.
3. Decide how you would like to connect the unit to your work area. There are two options:
 - A. Tabletop Mount:** Remove the thumb screws from the Flex Hose, separate it from the Mounting Plate, and remove the Mounting Adapter (Optional: Remove the metal Table Front Clamp from the Mounting Plate). Use the Mounting Plate as a guide and drill a 3.5" hole at the desired location. After the hole is drilled, insert the Mounting Adapter into the Mounting Plate and place it in the desired location. Using the four Mounting screws, secure the Mounting Plate to the bench. From the underside of the bench, insert then align the holes on the bottom Mounting Adapter piece with the holes on the top Mounting Adapter piece, and secure together with the two thumb screws (See Fig. 2). Once the plate is secured to the bench top, insert the 2.5" hose adapter included in this kit into the bottom of the Mounting Adapter with the white PVC end inside the Mounting Adapter. Finally, firmly press the Flex Hose into the Mounting adapter until it is secure.
 - B. Table Front Mount:** Loosen the screws on the Table Front Clamp and slide over the front of table. Tighten the screws to desired tightness.

Use the Adaptor to attach Vaniman 2.5" White Hose (VMC-1023).

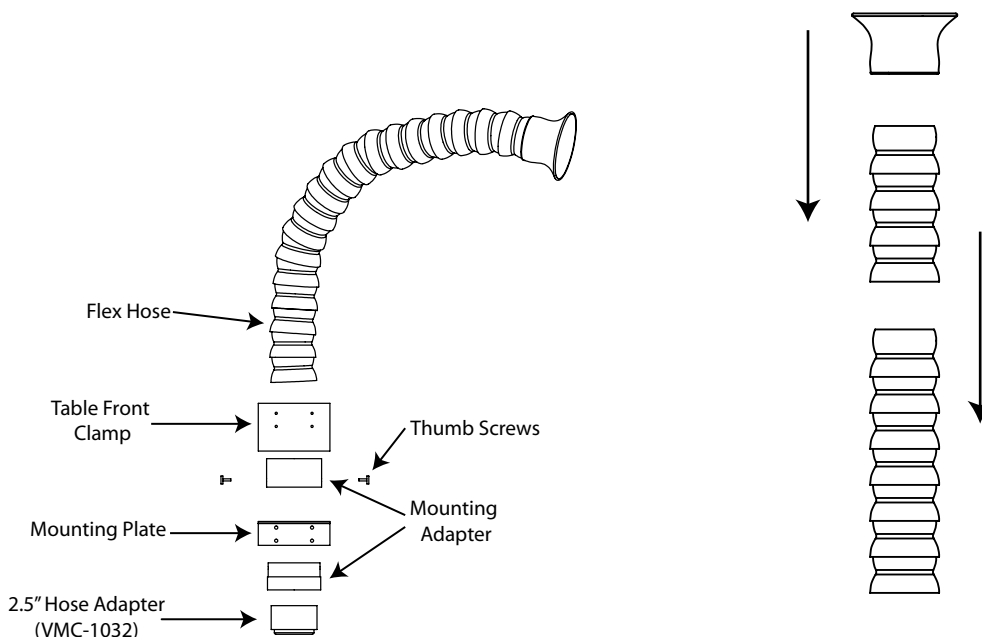


Fig. 2

Fig. 1