


HEPA FILTER

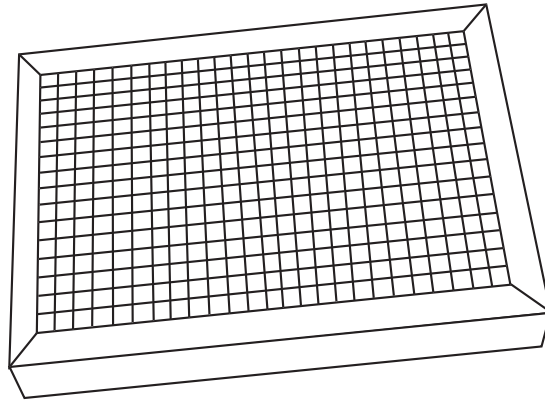

PACKING LIST

1 - HEPA Filter with Gasket

ABOUT THE PRODUCT

This filter kit is designed to make your job more comfortable and safer by removing 99.97% of dust, airborne particles, and any other materials evacuated by the dust collector. The filter is designed to be added to Vaniman Vanguard 1X and 2X, Van-I-Vac, and Voyager dust collectors internally. It is a HEPA grade filter to insure effective filtration.

INSTALLATION INSTRUCTIONS

1. Remove the filter access panel (front cover) from the dust collector.
2. Remove the filter bag from the unit or lift it up to expose the filter slot on the unit.
3. Remove any packaging from the filter cartridge. Carefully align the frame opening over the filter slot of the dust collector.
4. Slide the filter in to place with the gasket material facing upwards.
5. When the filter becomes excessively dirty, or suction is impeded, replace the HEPA cartridge.