


Specialty Dust Collectors

SandVac

Specifically designed for abrasives!

- Ultra powerful motor captures abrasive media and material
- Whisper quiet (55 decibels) and ultra-low maintenance design
- Multi-stage filtration
- Accumulator™ Pre-Filter captures 99% of all abrasive material
- Dual function remote control included
- Plug in your micro-abrasive blaster and control both with one easy step
- 2 year warranty

SandVac with Accumulator™ Pre-Filter 10211 ⚡

⚡ Available in 100, 220, 230, 240 Volts @ 50/60Hz CE 



Pre-Filtration

Accumulator™


The Vaniman Accumulator™ Pre-Filter is designed to protect and collect. It protects technicians and equipment from the damage caused by dust. It collects dust, valuable gold, aluminum oxide, stone, and acrylic before it reaches the dust collector.

Accumulator™ VMC-A300 (2 1/2" - 3" Plumbing)

Accumulator™ XL 10509 (2 1/2" - 4" Plumbing)

Air, dust particles and debris enter the swirling vortex inside the Accumulator™

Cleansed air flows up as dust particles are separated out and fall to the bottom.

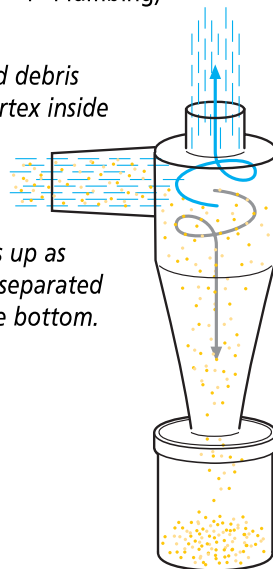

Air flows up from the Accumulator™. This air is now 95% free from dust particles. The air will now go into the filtering system of the dust collector.

Dust particles and debris are collected in the Accumulator bowl, which is easily detached and emptied.

