


# MASTER PROBLAST 3 ESD

A durable and versatile microabrasive sandblaster suitable for any application where ESD (Electrostatic Discharge) is an issue. It is the ideal solution for applications that require metal finishing, deburring, surface texturing, conformal coating removal, and much more.

## MODEL FEATURES

- 3 media tanks
  - 25 micron
  - 50-100 micron
  - 110-250 micron
- Adjustable compressed air ionizer floods cabinet with neutralizing ion flow for a continuously conductive environment
- Fully grounded cabinet and work surface
- Sapphire crystal/tungsten carbide precision tips
- Instant-off feature immediately starts and stops media flow to avoid nozzle bleed-off
- Bright LED for enhanced visibility

The Master Problast 3 ESD is designed for medium to heavy use. External dust collector not included.

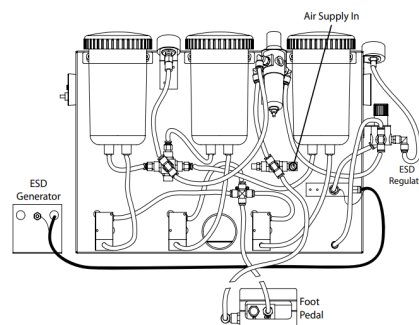

## MODEL SPECS

Tank size	1000 mL
Media options	Sodium Bicarbonate, Aluminum Oxide, Glass Bead
Measurements	18" long x 22" wide x 15" high
Weight	50 lbs.

PN: 80056

The Master Problast 3 ESD should be used with sufficient dust collection units (Vaniman products sold separately). Inquire with Vaniman Manufacturing Co. for details.

Manufactured in  
California, USA



vaniman.com  
+1.760.723.1498  
sales@vaniman.com