


SANDSTORM PRESTIGE

A versatile microabrasive sandblaster with a spacious steel cabinet. Suitable for general cleaning, finishing, surface preparation, deburring, etching, marking, and much more. Regular or Instant-Off (I/O) models available.

MODEL FEATURES

- 3 media tanks
 - 25 micron
 - 50-100 micron
 - 110-250 micron
- Sapphire crystal/tungsten carbide precision tips
- Handles all types of blasting media from 60 to 360 grit
- Powder-coated steel cabinet with comfortable hand cuffs
- Built-in pressure delivery system including a 0-100 PSI adjustable filter regulator
- Foot pedal control
- Instant-off model immediately starts and stops media flow to avoid nozzle bleed-off
- Bright LED for enhanced visibility

The SandStorm Prestige and SandStorm Prestige I/O are designed for medium to heavy use. External dust collector not included.

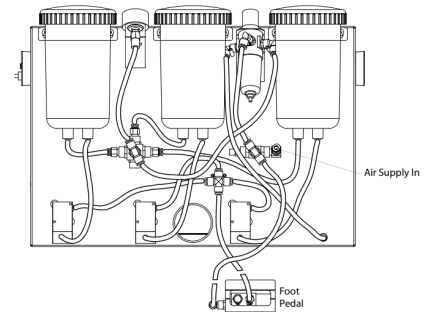

MODEL SPECS

Tank size	1000 mL
Media options	Sodium Bicarbonate, Aluminum Oxide, Glass Bead
Measurements	18" long x 22" wide x 15" high
Weight	42 lbs.
Voltage/Amperage	120V, 15A/5A (220V / 240V optional)

SandStorm Prestige: PN 80150 / PN 80151 | SandStorm Prestige I/O: PN 80170 / 80171 - for tank setup info, contact Vaniman. The SandStorm Prestige should be used with sufficient dust collection units (Vaniman products sold separately). Inquire with Vaniman Manufacturing Co. for details.



vaniman.com
+1.760.723.1498
sales@vaniman.com