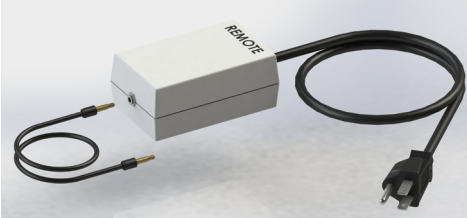

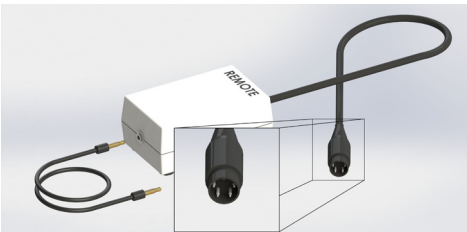

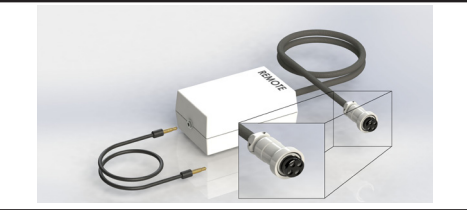



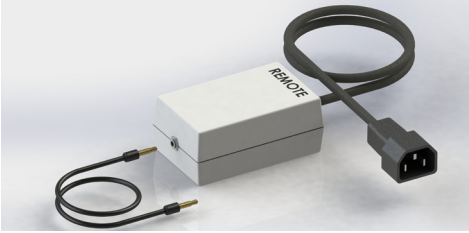
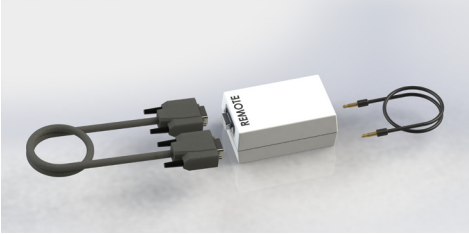
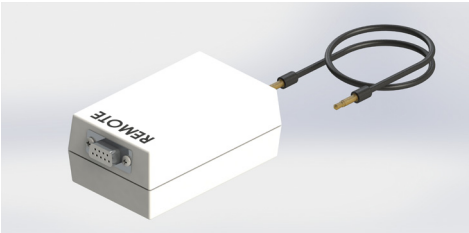
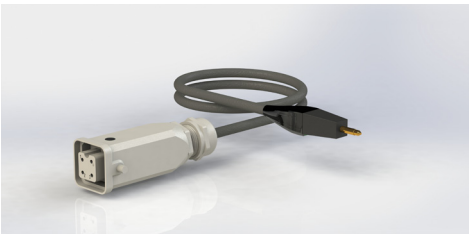
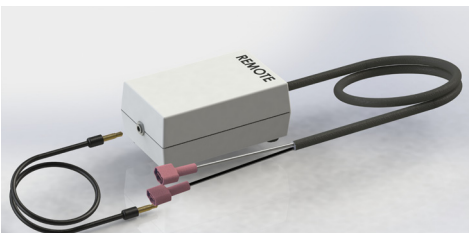
INTRODUCTION:

Vaniman's V6 SE and StoneVac Brushless SC models are commonly used for dust collection with a variety of mills. This adapter guide provides a list of supported mills and their required mill remotes.

ASSEMBLY INSTRUCTIONS:

When connecting a Mill Remote to a dust collection unit, turn the dust collector On and run the unit before connecting your Mill Remote. Once the unit has been tested, turn it off, then plug the appropriate end of the mill remote into the dust collector's remote port and the other into the mill. Refer to the specific dust collector's user manual for remote operation.

<p>PN: 10514</p>	<p>Lava</p>	
<p>PN: 96054</p>	<p>LaserDental</p>	
<p>PN: 96119</p>	<p>Wieland - Zenotec VHF Mills: Preciso M200 (Jensen) / MasterMill / BruxZir (Glidewell) CAM 4-K4 / CAM 5-S1 / CAMV 5-S2</p>	
<p>PN: 11072</p>	<p>Roland DWX-52DC Roland DWX-52DCi Roland DWX-51D Roland DWX-50 EGX-350</p>	
<p>PN: 96102</p>	<p>XTCERA X-Mill 500</p>	
<p>PN: 96078</p>	<p>VHF K5 Impression</p>	

<p>PN: 10523</p>	<p>Zirkon Zahn</p>	
<p>PN: 96077</p>	<p>IMES Mill - 150i, 350i</p>	
<p>PN: 10520</p>	<p>Yenadent Dental Mill M450i</p>	
<p>PN: 11063</p>	<p>DentalMachine - A5, C5, C6</p>	
<p>PN: 10525</p>	<p>Digital Dental</p>	
<p>PN: 11065</p>	<p>ARUM 5X-300</p>	