


MASTER PROBLAST 3 ESD

A durable and versatile microabrasive sandblaster suitable for any application where ESD (Electrostatic Discharge) is an issue. It is the ideal solution for conformal coating removal and other processes like metal finishing, deburring, surface texturing, and much more.

MODEL FEATURES

- 3 media tanks
 - One for VanAcrylic media
 - Two for 50-100 micron media
- Adjustable compressed air ionizer floods cabinet with neutralizing ion flow for a continuously conductive environment
- Fully grounded cabinet and work surface
- Three-way LED/UV/Combination light
- Sapphire crystal/tungsten carbide precision tips
- Instant-off feature immediately starts and stops media flow to avoid nozzle bleed-off
- Bright LED for enhanced visibility

The Master Problast 3 ESD is designed for medium to heavy use.
External dust collector not included.

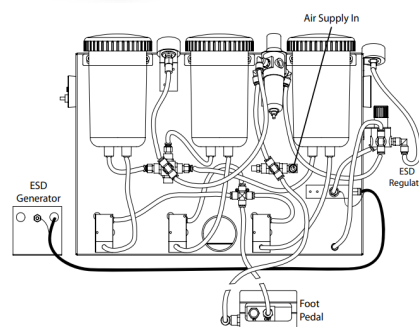

MODEL SPECS

Tank size	1000 mL
Media options	VanAcrylic (Plastic), Sodium Bicarbonate, Aluminum Oxide, Glass Bead
Measurements	18" long x 22" wide x 15" high
Weight	50 lbs.

PN: 80056

The Master Problast 3 ESD should be used with sufficient dust collection units (Vaniman products sold separately).
Inquire with Vaniman Manufacturing Co. for details.